





VIEW[®]

Analog HD Box Camera User Manual

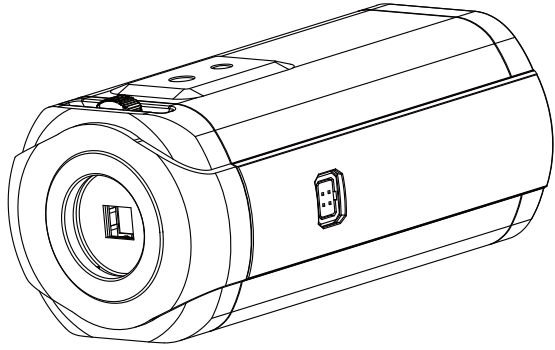

V531-CR036-200
VER. 03/2020

Parts Descriptions

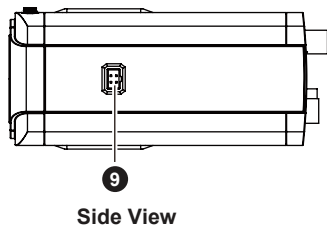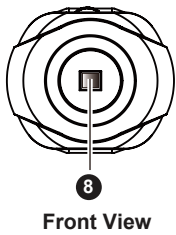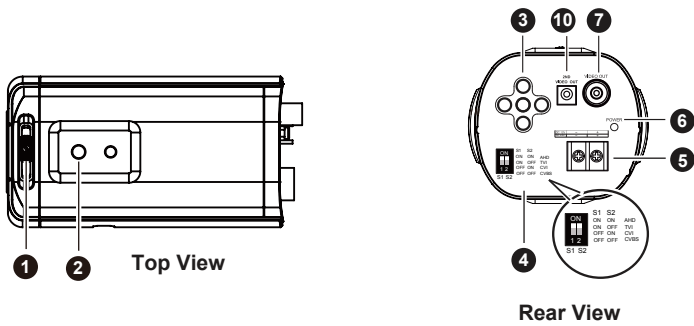

1. Back Focus Adjustment
2. Bracket Mount
3. OSD Control
4. Dip Switch
5. Power Input Terminal Block
6. Power LED Indicator
7. BNC Composite Video Output
8. CMOS Sensor
9. DC Lens Connector
10. Second Video Output

Accessories

C-CS Mount Adaptor X1

Specifications


General Specifications	
TV System	NTSC / PAL
Scanning Frequency	NTSC: 60Hz / PAL: 50Hz
Iris Type	Auto Iris
Image Sensor	1/2.9" CMOS Sensor
Effective Picture	2 Megapixel
Resolution	2000(H)*1121(V)
S/N Ratio	≤44 dB (AGC OFF)
Minimum Illumination	Color: 0.1 Lux ; B&W: 0.05Lux
Video Output	AHD/TVI/CVI/CVBS
Power Source	DC12V±10% ; AC24V±20%
Power Consumption	2.8 W Max
Operating Temperature	-10 C ~+50 C
Storage Temperature	-20 C ~+60 C
Functional Specifications	
AES	AUTO/1/30-1/50000 Sec
BLC/HLC	Off / On
AGC Gain Control	Support
Day/Night Control	Auto/External Control/Color/B&W
White Balance	Auto / Auto Ext / Preset / Manual
UTC Remotely Transmission	DVR Remotely Control
D-WDR	OFF/ON
Defog	Off / On, Low / Middle / High
Motion Detection	OFF/ON, 4 Zones
Privacy Zone	4 Privacy Zones
Sharpness	0-10
Digital Noise Reduction	2D/3D NR
Language	English/Simplified Chinese/Traditional Chinese/German/ French/Italian/Spanish Polish/Russian/Portuguese/Dutch/ Turkish

Precautions

- Do not attempt to aim the camera at the sun or other extremely bright objects. This may cause damage to the CMOS and the void of warranty.
- Do not touch the lens or the CMOS by hands while installing or adjusting the camera. This may cause damage to the camera.
- Do not attempt to disassemble the camera, any damage caused by disassembly is not covered by guarantee.

Camera Installation

The camera can be mounted by using either the bracket mount on the top or bottom. The bracket mounts accept standard photographic mounting bolts (1/4" BSW or 20 UNC).

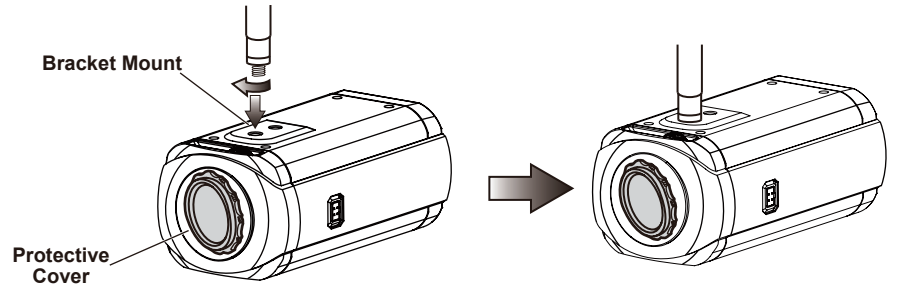


Ensure the bracket, screws (inc. wall plugs, if used) and mounting surface can support the load of the camera and bracket.

Connecting to the Power Source and Video Output

The camera operates at either 24 VAC or 12 VDC. Connections are indicated in the rear panel of the camera. The power supply must be stable power source and should only be installed by qualified personnel. Connect the 75 Ohm coaxial cable to video output.

AC/DC Low Voltage (24VAC /12VDC)

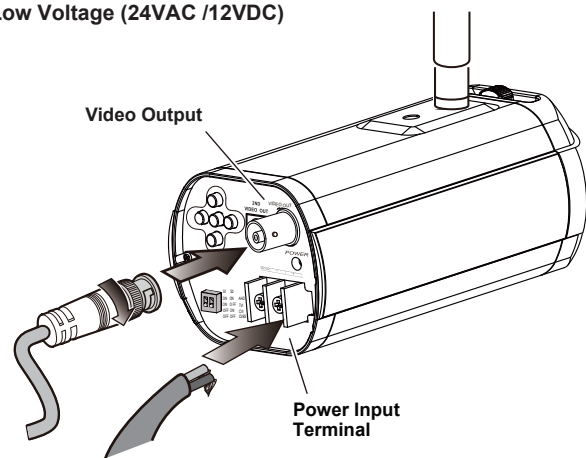


Connection and Adjustment

Lens Installation

Installing the Lens

First remove the protective cover from the camera. If mounting a C-Mount lens, attach the C-CS mount adaptor to the camera.


Adjust the Back Focus to acquire a sharp image (see Back Focus Adjustment).

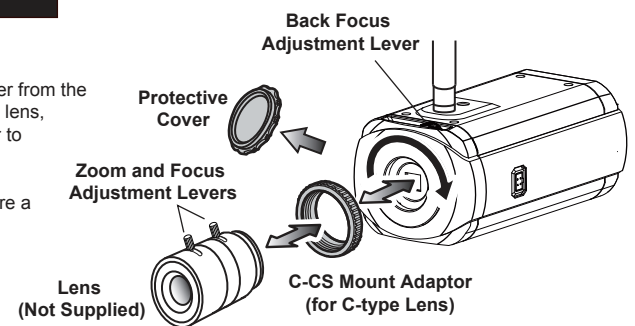

Back Focus Adjustment

There is a mechanism for back focus adjustment. Loosen the back focus locking screw. Move the adjustment lever to obtain optimum focus of the image.


Tighten the screw to lock the back focus adjustment lever in place.

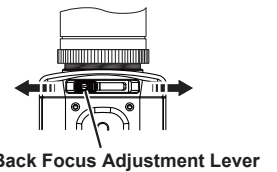

Manual / Fixed Lens Mounting

For Manual / Fixed Lens application

1. Adjust the Back Focus to the correct position then secure the screw.
2. Adjust the Zoom and Focus levers of the lens to acquire a clear image and the required field of view.

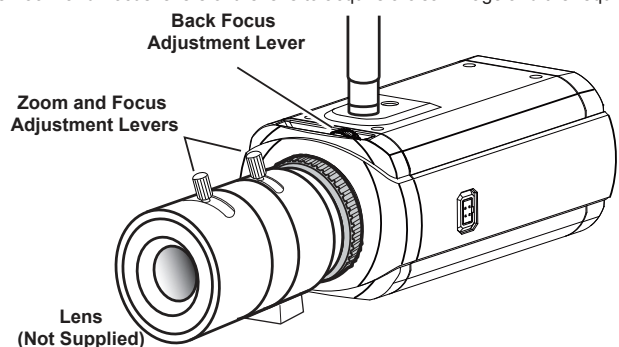

Camera OSD Menu

